



Repairing LG VX5200 LCD screen

Tools used in this guide

- [Fingers](#)
- [Phillips #00 Screwdriver](#)
- [Plastic Opening Tools](#)
- [Thumb Tack](#)
- [Tweezers](#)



Step 1 - Battery

- Turn the phone on its back.



Step 2

- Orient the phone as shown.
- Remove the battery cover by pushing upward with your thumb.






Step 3


- Place your fingernail at the top of the battery and pry the battery out towards you.



Step 4 - Face Plate


- Flip the phone open.
- Remove the four rubber plugs, located at the corners of the LCD screen, with a push-pin.
- Use a Phillips #00 screwdriver to remove the four screws located underneath the rubber plugs.

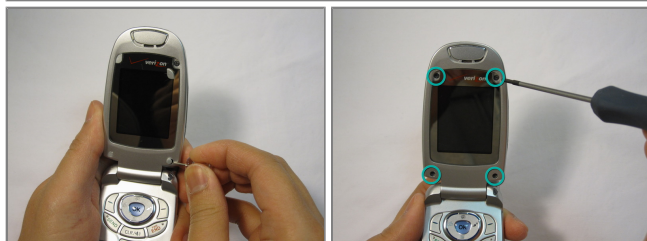

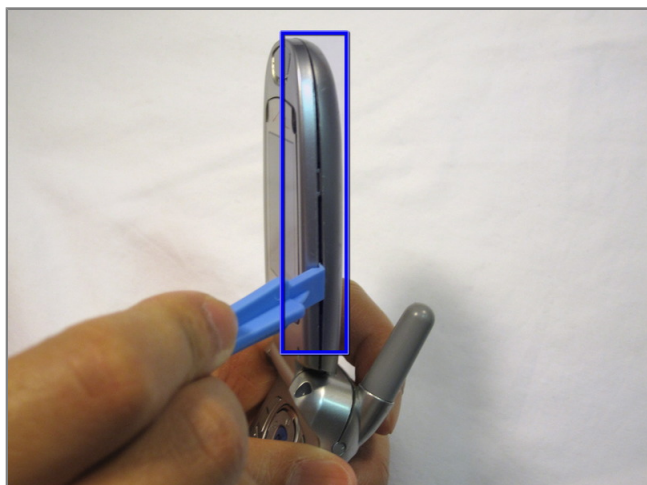


Step 5

- Insert the iPod opening tool in the seam of the top portion of the flip phone.
- Gently pry the seam open.
- Move the opening tool around the perimeter of the seam and gently take the front LCD face plate out.

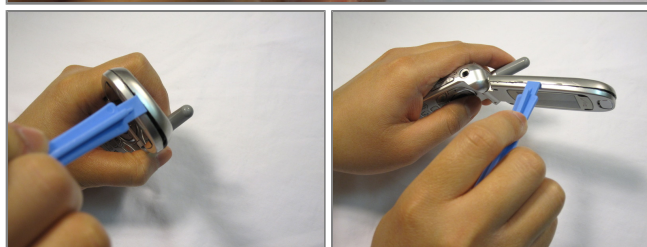

Step 6

- Close the flip phone.
- Hold the base of the phone and gently remove the faceplate.
- Place the phone and the faceplate on a clean, flat surface.

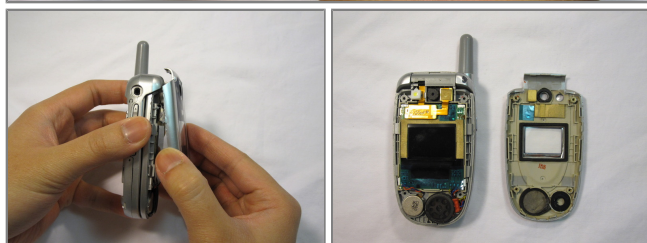




Step 7 - LCD screen


- Try not to move the thin component wires as they will bend and break very easily.
- The speaker is the dark gray, larger circular-shaped piece to the right of the battery. Attached to it are the four thin wires.
- The vibrator wires are thinner and even more fragile.



Step 8


- Remove the white stopper from the camera light located above the gold connector.
- Lift the gold connector up with your finger to detach it.

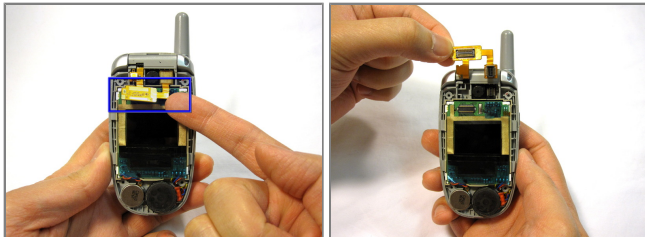

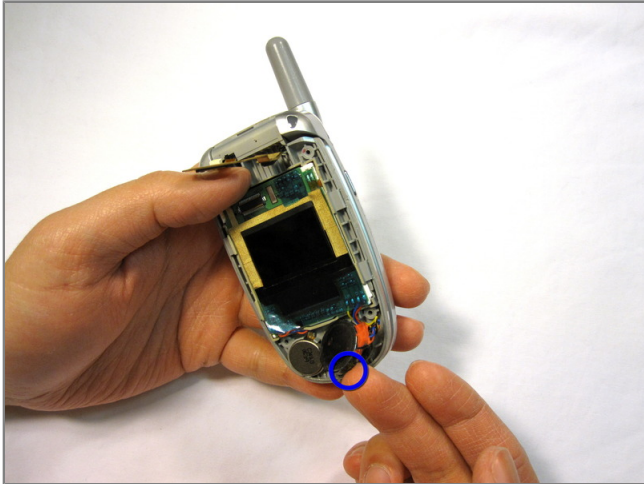


Step 9

- Gently lift out the speaker with your fingertip.

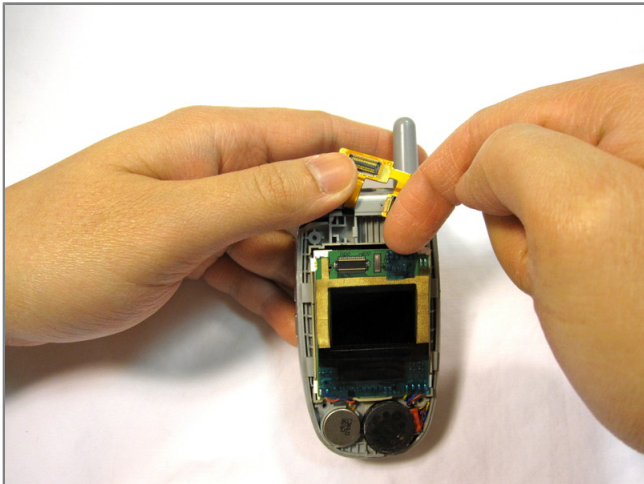

Step 10

- Gently lift out the square LCD assembly being careful with the attached vibrator wires.
- Gently remove the vibrator with tweezers.
- The LCD screen, speaker and vibrator will separate from the phone as a single unit.

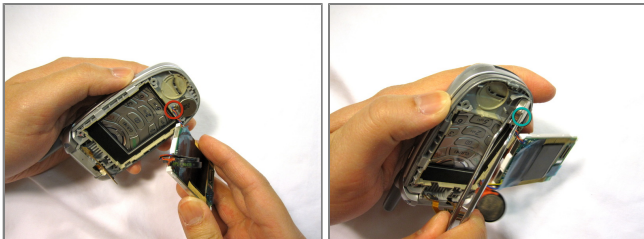



Step 11

- Place phone body and LCD screen on a clean, lint-free surface.

